

Installation Instructions - Tension Rod



Finial Rod Installation Instructions/Twist Tight Rods

1. To lengthen the rod quickly, remove collar between small and large tube and let the rod hang down from your hand while holding the small tube. The large tube can then spin downward easily.
2. Turn the tubes in opposite directions to make the rod longer or shorter.
3. After the end caps are touching your walls, turn the rod 3 or 4 more times to tighten the rod in place. Reinsert the collar into the large tube.