


Instructions for Models:

SA-1200
SA-1200-BN
SA-1200-PN

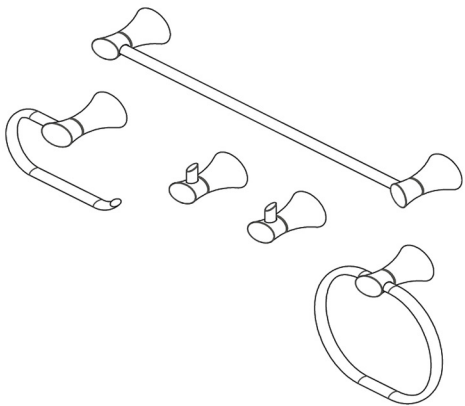

Need Help?

For additional assistance or service call:

SPEAKMAN Company
400 Anchor Mill Road
New Castle, DE 19720

PHONE: 800-537-2107
EMAIL: customerservice@speakmancompany.com
WEB: www.speakmancompany.com

92-3290-R1

What You Need To Know:

Tools:

Required:


*Phillips Screwdriver




*Allen Wrench (supplied)



*Drill with 1/4" bit

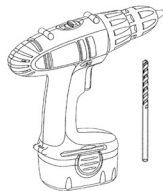

*Pencil




Helpful:

*Tape Measure



*Level

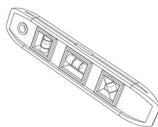

Important Notes:

Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.

Safety Tips:


This item is **NOT** designed for use as a grab bar. Do not mount in locations where product is likely to be used as a grab bar.

Use caution when drilling into walls to avoid electrical and plumbing lines hidden within wall.


Maintenance:

Clean with a soft, damp cloth only. Do not use scrub pads, detergents or cleansers as they may harm the protective finish of your bath accessories.


1 Loosen set screw at base of each post and remove brackets (if necessary). Determine mounting location of component and lightly trace outline on wall with a pencil

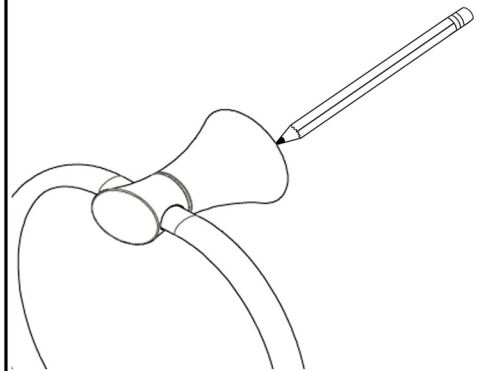


2 Center Mounting Bracket within traced outline. Mark the 2 mounting locations with a pencil.

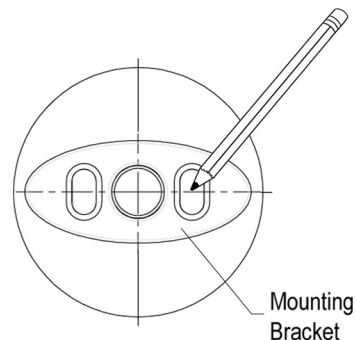


3 Drill 1/4" holes in marked locations. If mounting directly into stud or wood wall, secure Mounting Bracket to wall using Mounting Screws without drilling holes.

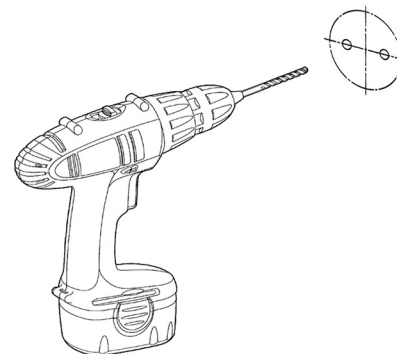


4 Insert Plastic Anchors into drilled holes and press in until flush with wall. Secure Mounting Brackets to wall with Mounting Screws using Phillips screwdriver.

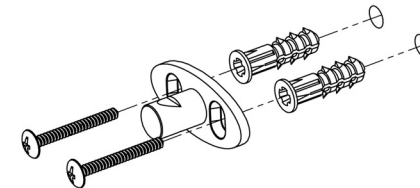


5 Locate post over Mounting Bracket and tighten Set Screw with supplied Allen Wrench. Repeat steps 1 thru 5 for remaining items.

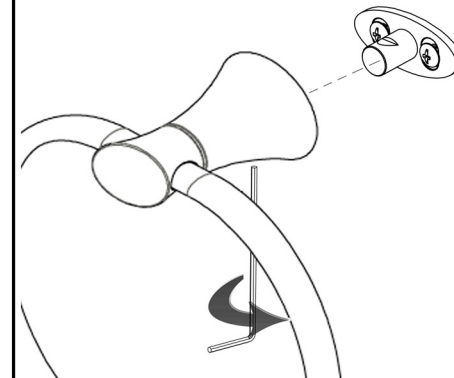


Towel Bar

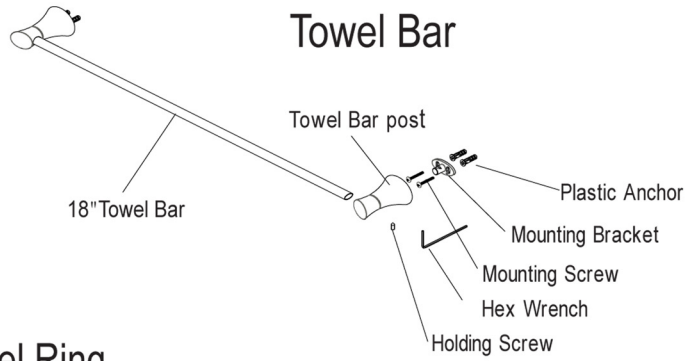


Towel Ring

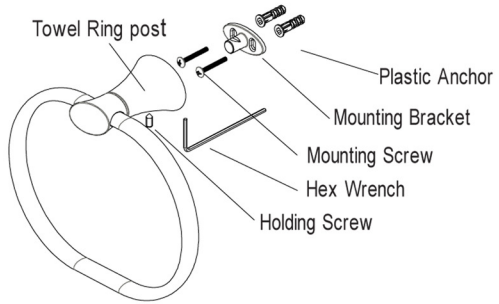


Robe Hook

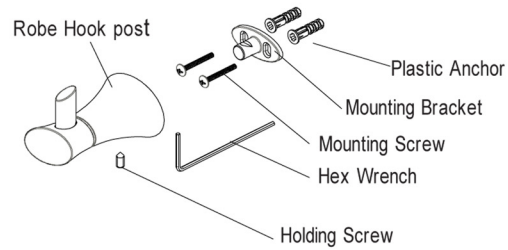


Tissue Holder

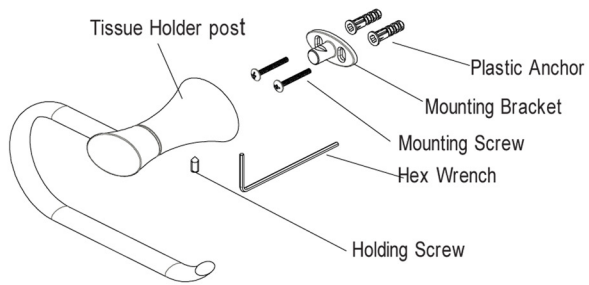


Towel Bar

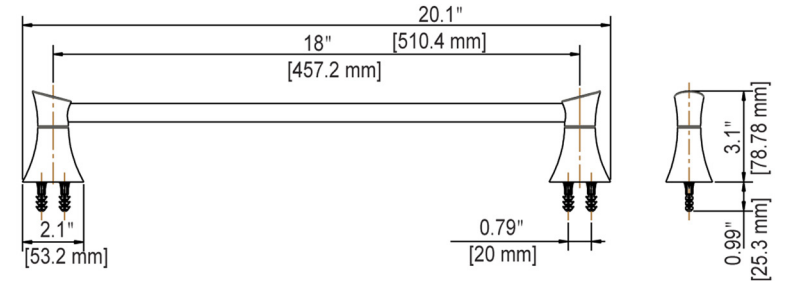

Robe Hook

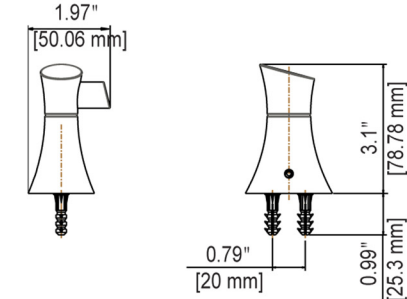

Towel Ring

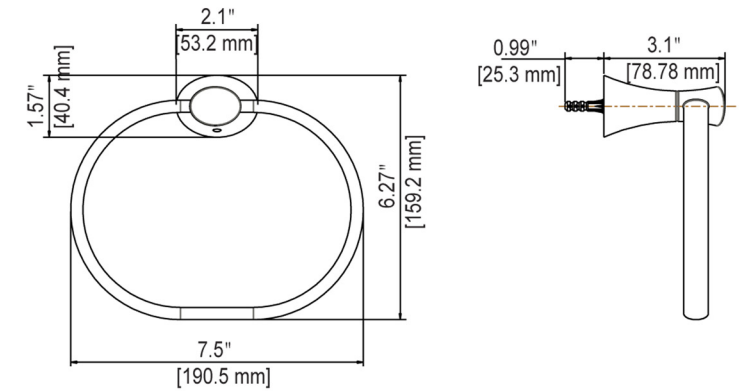

Tissue Holder

